Trusted. Tested. Tough.®

ZOELLER® PUMP COMPANY

MAIL TO: P.O. BOX 16347 • Louisville, KY 40256-0347
SHIP TO: 3649 Cane Run Road • Louisville, KY 40211-1961
Tel: (502) 778-2731 • 1 (800) 928-PUMP

CL0035
0224
Supersedes
0223

Visit our website:
zoellerpumps.com

Product information presented here reflects conditions at time of publication. Consult factory regarding discrepancies or inconsistencies.


Centrifugal STEP Discharge Assemblies

TECHNICAL SPECIFICATIONS

Zoeller Pump Company's Centrifugal STEP (Septic Tank Effluent Pump) Discharge Assemblies are used to transfer effluent from a centrifugal STEP vault up and out of the tank. Each discharge assembly consists of a male adapter, SCH 40 PVC piping, elbows, a union-ball valve, pipe seal, and a 1-1/4" flexible PVC pipe stub to extend through the riser wall. A check valve or air vacuum relief valve is optional. All discharge assemblies ship preassembled.

Features

- Easy to install and remove
- Designed for use in centrifugal STEP system applications
- 1-1/4" flexible discharge assemblies with union-ball valve for easy pump removal

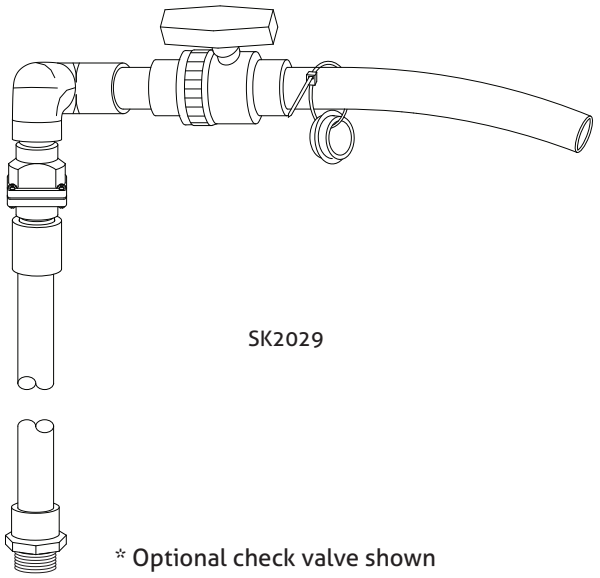

SK2029

* Optional check valve shown

Products	
Part Number	**Description**
170-0083	Discharge Assembly, Flexible / 1.25" PVC / STEP / Sch 40
170-0084	Discharge Assembly, Flexible / 1.25" PVC / Check valve / STEP / Sch 40
170-0169	Discharge Assembly, Flexible / 1.25" PVC / Extended STEP /Sch 40
170-0170	Discharge Assembly, Flexible / 1.25" PVC / Check valve / Extended STEP / Sch 40
170-0166	Discharge Assembly, Flexible / 1.25" PVC / Check valve / Air Relief / Sch40

⚠ CAUTION All installation of controls, protection devices and wiring should be done by a qualified licensed electrician. All electrical and safety codes should be followed including the most recent National Electrical Code (NEC) and the Occupational Safety and Health Act (OSHA).

© Copyright 2024 Zoeller® Co. All rights reserved.