

Product information presented here reflects conditions at time of publication. Consult factory regarding discrepancies or inconsistencies.



MAIL TO: P.O. BOX 16347 • Louisville, KY 40256-0347
SHIP TO: 3649 Cane Run Road • Louisville, KY 40211-1961
Tel: (502) 778-2731 • 1 (800) 928-PUMP


Visit our website:
zoellerpumps.com



OIL SMART® QUICK MOUNT BRACKET FLOAT TREE & RETROFIT INSTALLATION INSTRUCTIONS


1. To install the Oil Smart® Float Tree snap a 1-1/2" PVC pipe into a Quick Mount Bracket. Align PVC pipe vertically and mark the hole positions. If mounting to concrete, drill 1/4" diameter anchor holes 1" deep. Place the screw anchors in the drilled holes. For PVC Risers use a 1/8" diameter drill and mount the Quick Mount Bracket using the washers and screws provided.
2. Glue the PVC Cap onto the top end of the 1-1/2" PVC pipe and snap the pipe into the bracket (See Figure 1).
3. Mount pump switch and alarm switch to Quick Mount Brackets as shown in Figure 1, with screws and nuts provided.
4. Snap each bracket in place at desired height and install a hose clamp just below the Quick Mount Bracket (See Figure 1). For the Oil Smart® Pump Switch, position the end of the long rod about 2" above the top of the pump. For the Oil Smart® Liquid Alarm Switch, position the sensors about 10" above the on level of the pump switch sensor (See Figure 2).
5. Drill a 1/8" Diameter hole in pipe near the PVC Cap for air vent.

Figure 1

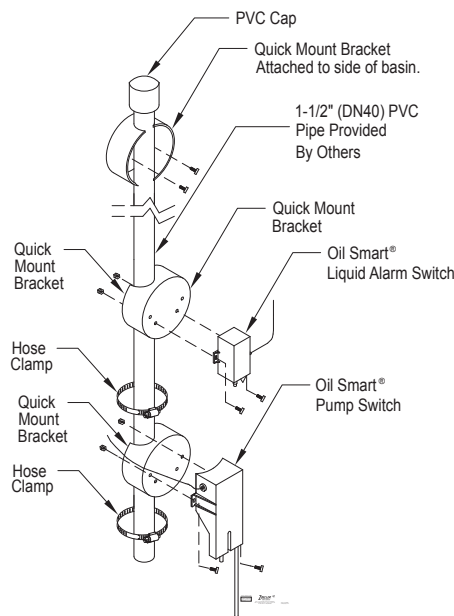

SK2565

Figure 2

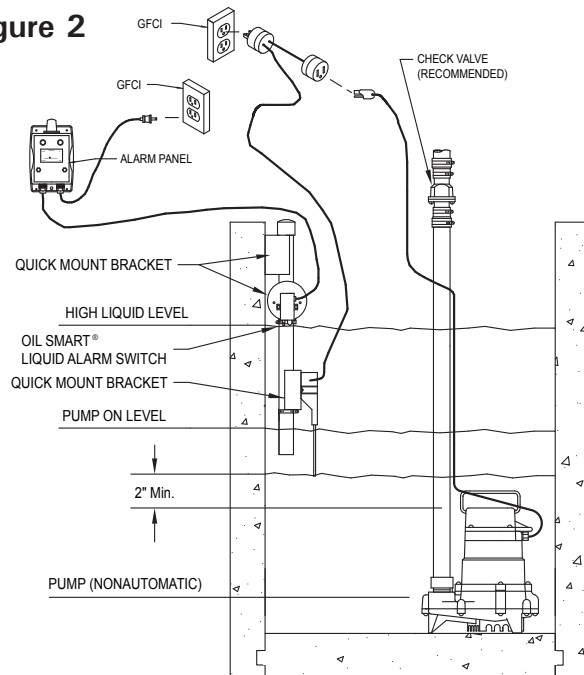

SK2547